

INSTALLATION

The cartridge "SUPER CATALYZER"^{®™} must be installed :

- A in the petrol engines between the fuel pump and the carburetor or the injection system.
- **B** in the diesel engines between the fuel pump and the diesel filter in the models with pump, after diesel filter in the models with injectors pump.
- C in the gas engines between the tank and the expansion tank, near the last one.



