




super catalyzer<sup>®</sup>™

CE

# EXEMPLU DE INSTALARE PER ARZATOR

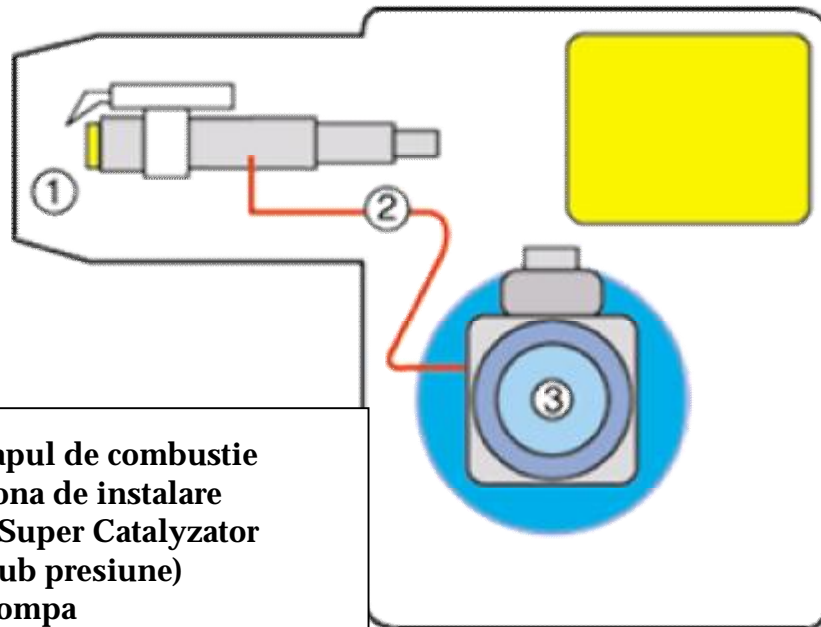

- 1 - capul de combustie
- 2 - zona de instalare  
a Super Catalyzer  
(sub presiune)
- 3 - pompa